



Ordering Information - 1166 UHF RFID Reader

1166 Reader Box Contents:



For operation in **Europe**, order:

1166-EX1 (ETSI, No Barcode Imager)

1166-ES1 (ETSI, 2D Barcode Imager)

For operation in **North America**, order:

1166-AX1 (FCC, No Barcode Imager)


1166-AS1 (FCC, 2D Barcode Imager)

For other regions:

Please see the [1166 Datasheet](#) for details of all available regions.

Please Note: Additional Purchases Required for Charging

A Docking Cradle, Power Supply Unit and IEC Line Cord (mains cable) are required in order to charge the 1166 Reader - see Page 2 for further details.

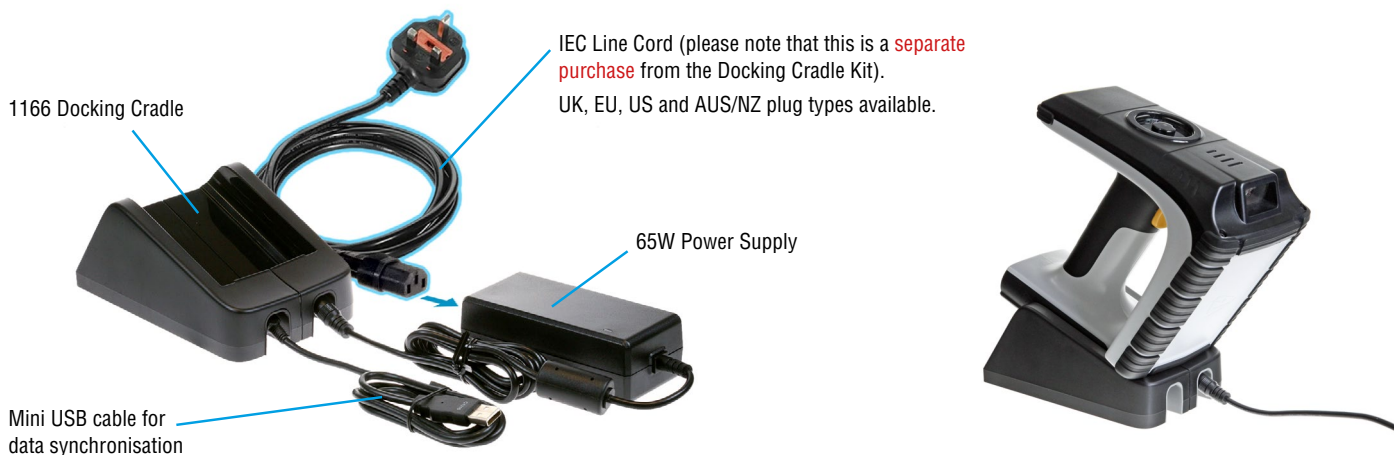



1166 Docking Cradle Kit Contents:

Order:

1166-CRD-01-KIT



IEC Line Cords Available from TSL®:



For UK, order:
IEC-1M-UK



For EU, order:
IEC-1.8M-EU



For US, order:
IEC-1.8M-US



For AU/NZ, order:
IEC-2M-AU-NZ