


What Is Required To Operate The 2128 UHF RFID Reader:

The 2128 UHF RFID Reader requires the [2128-CRD-03-KIT](#) in order to charge the reader.



Reader Box Contents:

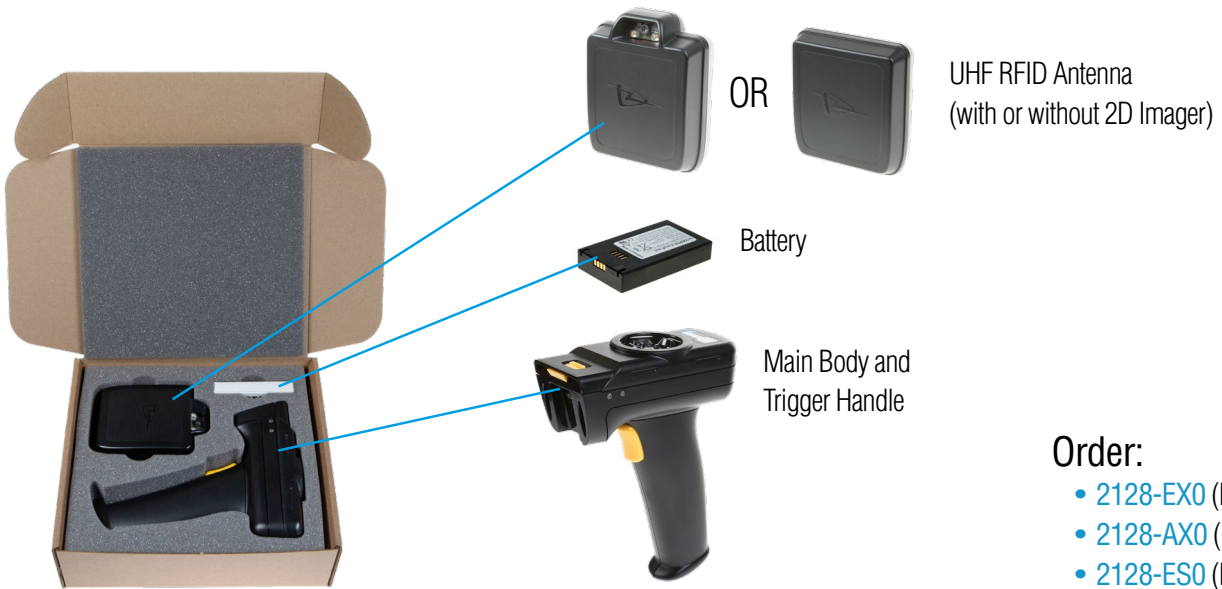

Order:

- [2128-EX0](#) (ETSI, No Imager)
- [2128-AX0](#) (FCC, No Imager)
- [2128-ES0](#) (ETSI, 2D Imager)
- [2128-AS0](#) (FCC, 2D Imager)

Cradle Box Contents:



Order:

- [2128-CRD-03-KIT](#)