




What Is Required To Operate The 2128 UHF RFID Reader:

The 2128 UHF RFID Reader requires an additional purchase of the [2128-CRD-03-KIT](#) in order to charge the reader.



Reader Box Contents:

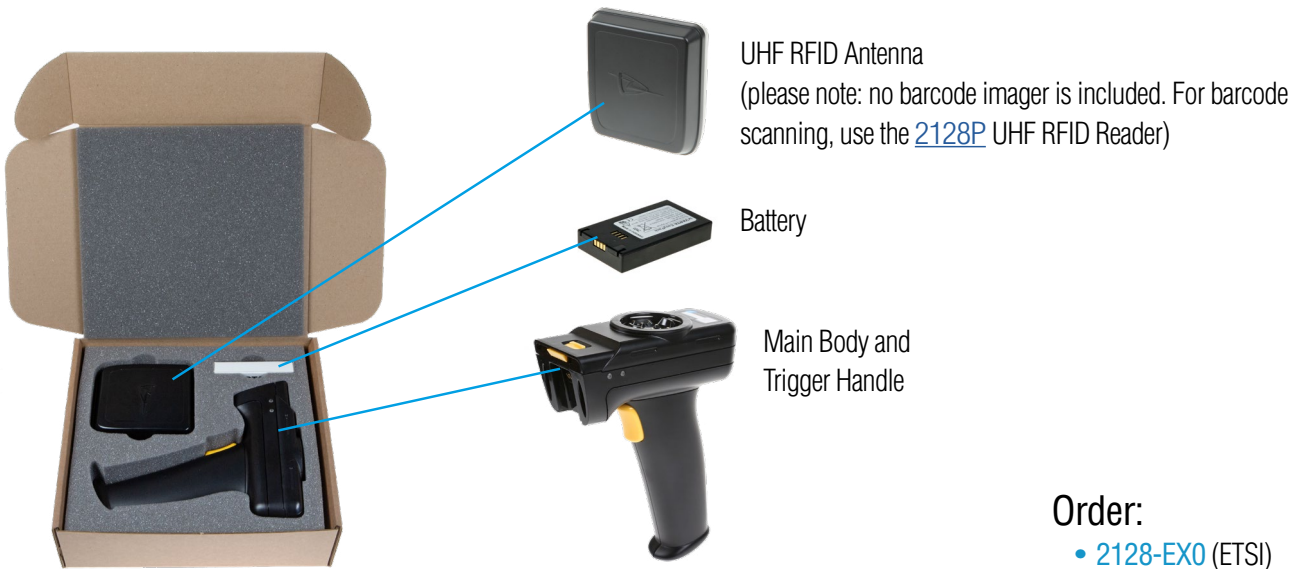

Order:

- [2128-EX0](#) (ETSI)
- [2128-AX0](#) (FCC)

Cradle Box Contents:



Order:

- [2128-CRD-03-KIT](#)